



# Worksurface Mounted Privacy Screen with Flush Brackets INSTALLATION INSTRUCTIONS

**STEP 1.** Prepare flush brackets by sliding the screen pad inside the bracket and attaching the worksurface pad (use with 1" thick worksurfaces only).

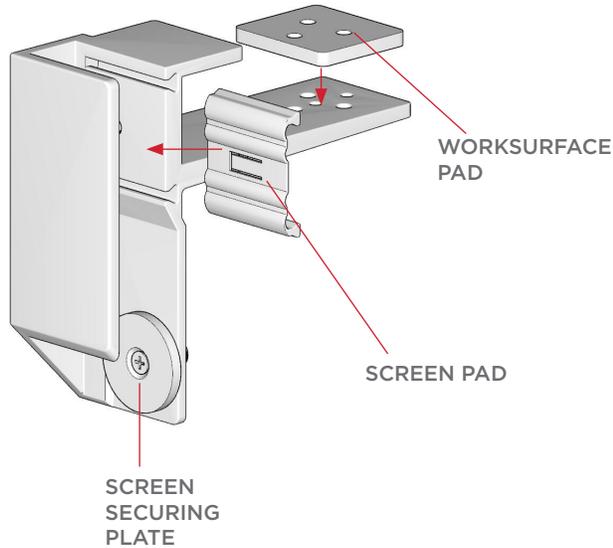


**STEP 2.** Pair of brackets are provided, for each privacy screen.


**NOTE:** Worksurface pads insert applicable for installation onto 1" thick worksurfaces only. Remove insert for installations onto 13/16" thick worksurfaces.

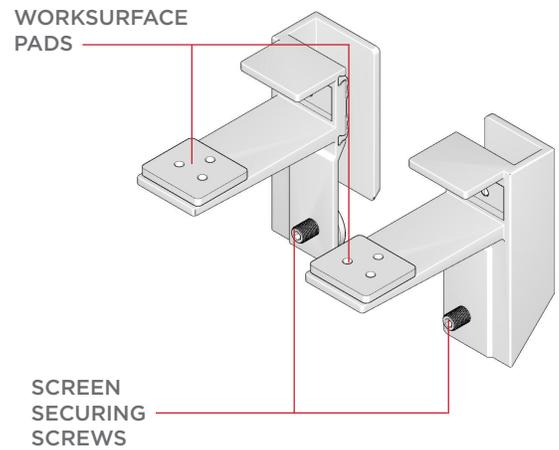

**STEP 3A.** Align the flush brackets on each side of the privacy screen. Insure that they are leveled.

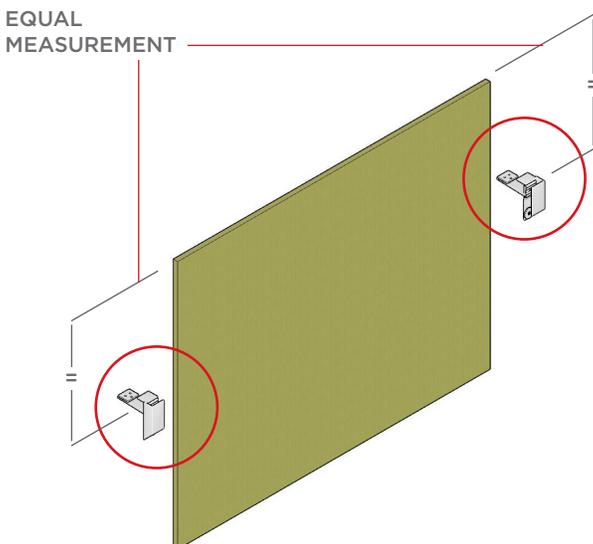


**STEP 3B.** Slide the flush brackets onto the privacy screen.

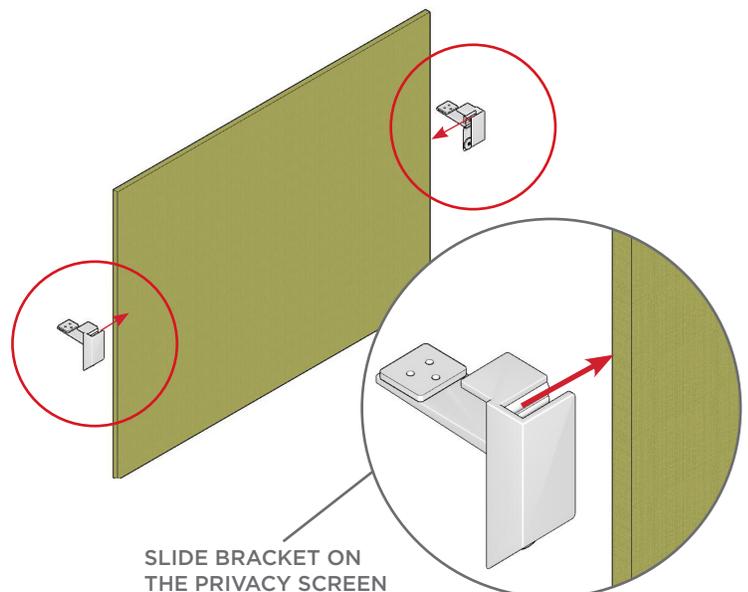


# Worksurface Mounted Privacy Screen with Flush Brackets INSTALLATION INSTRUCTIONS


**STEP 4.** Insure the brackets are leveled. Secure by tightening the screen securing screws.

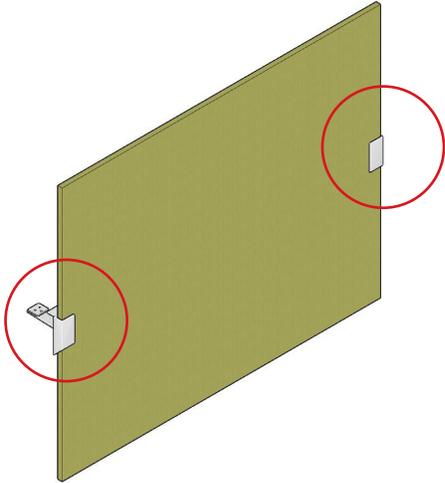

**STEP 5.** Slide the privacy screen in between the worksurface and legs.

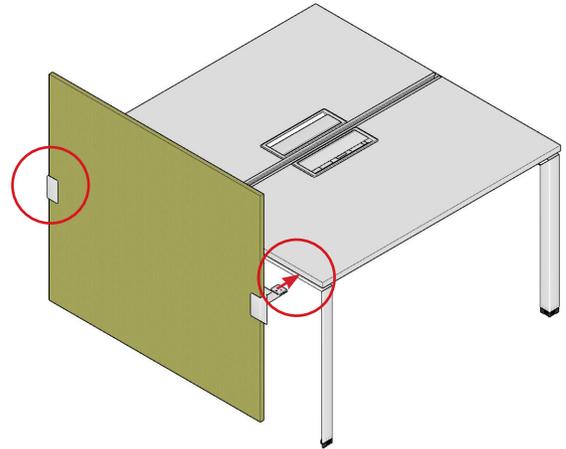

**STEP 6.** Secure privacy screen with brackets to worksurface with (3) screws on each bracket.

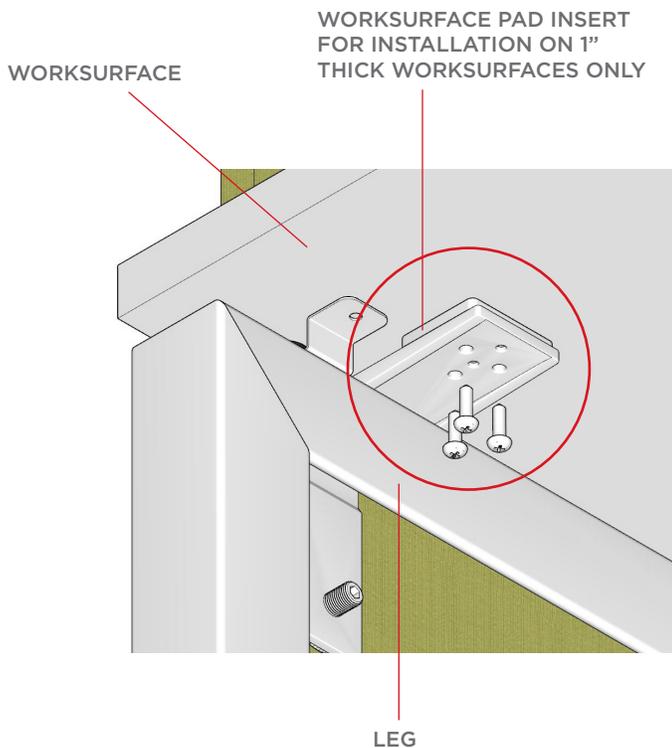

**STEP 7.** Finsihed installation of the privacy screen with flush brackets to a worksurface.

